


FREEDOM BASIC REMOTE PANEL DATASHEET

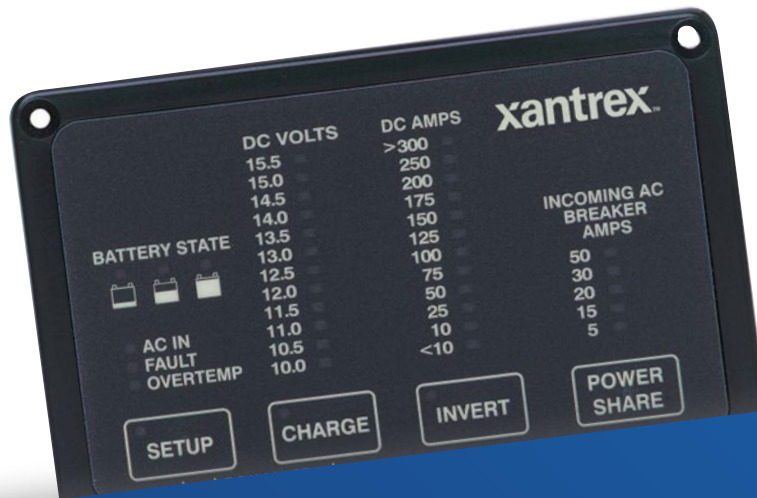

MONITORS AND CONTROLS INVERTER/CHARGER SYSTEMS

The Freedom Remote Control Panel allows you to control your Freedom Combi, Freedom 458 and Freedom Marine Series Inverter/Charger system from any convenient location. With controls that can be accessed directly from the front panel, it is easy to read, operate and install.



LED warning indicators for low battery and overload warning



Multi-colored LED displays for real-time status



Independent invert and charge on/off controls



Incoming AC breaker selection allows programmable power sharing



Push button control of power sharing, equalizing, battery set-up




Splash resistant design

APPLICATIONS:



**2 YEAR
WARRANTY**

www.xantrex.com
CUSTOMER CARE: 1.800.670.0707

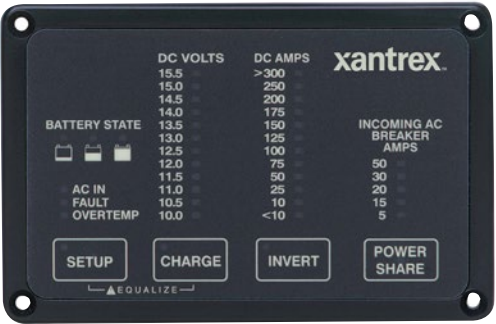


FRONT VIEW

GENERAL SPECIFICATIONS

	FREEDOM BASIC REMOTE PANEL
Voltage Bar Graph	10.0 – 15.5Vdc
DC Amps Bar Graph	Idle mode = off
	Loaded = <10 300 DC Amps
Operating Temperature Range	0 – 70°C
Compatible Battery Types	Wet / Gel / AGM
Design	Splash Resistant
Dimensions (L x W x H)	5.75 x 3.75 x 1.75" (146 x 95 x 44.5mm)
Cutout Size (W x H)	4.875 x 2.875" (116 x 73mm)
Weight	3oz (85g)
Part Number	84-2056-01

Specifications are subject to change without notice.

FREEDOM BASIC CONTROL PANEL DIMENSIONS

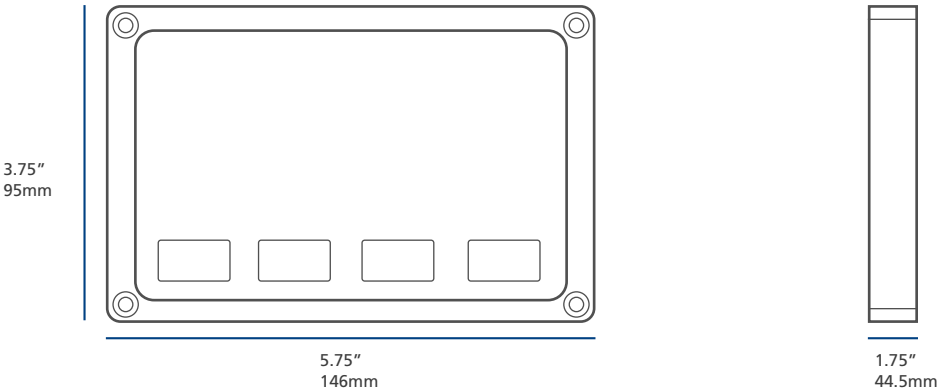

CONTACT

CUSTOMER SERVICE

1.800.670.0707
customerservice@xantrex.com
Hours of operation:
6:30am - 4:30pm PST, Monday to Friday

 facebook.com/Xantrex

 @Xantrex

 youtube.com/XantrexTechnology

LEARN MORE ON:

www.xantrex.com