

Freedom 458 Auxiliary Switch Port Errata


Errata

Freedom 458

976-0137-01-01 Rev A

In early versions of the Freedom 458 — which includes all inverters with software revision 4.0 and earlier or units which were produced before 2001 — the installation of a jumper is necessary for operation of the inverter/charger when a remote isn't used. This is explained in the manual and detailed in the Figure below. All 458 inverters manufactured prior to 2001 included a jumper in the accessories bag to facilitate the installation of the inverter.

13. An Auxiliary Switch port is located on the front panel of the unit, covered by a flap. When installing the unit for operation without a Remote Control Panel or Link Instrument, a jumper must be installed in the Aux Switch port. The jumper is shipped in a plastic bag with other installation parts. DO NOT install the jumper until all cable connections have been made.
When using a Freedom Remote Control Panel or Link Instrument, the jumper is not used.

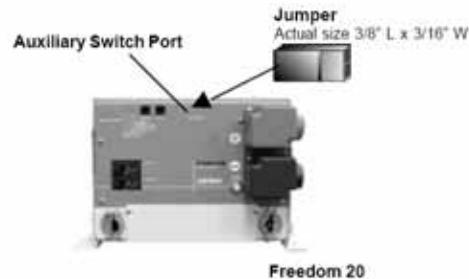

Current versions of the product do not require the installation of the jumper, because it is no longer necessary for operation of the inverter when used without a remote control. The Auxiliary Switch Port can now be used to turn the inverter on with the use of a contact closure. Connecting these two pins together turns the inverter on, and disconnecting them turns the inverter off. Some RV manufacturers use this feature to power a back-up camera and a 120 Volt TV.

Trademarks Freedom 458 is a trademark of Xantrex International. Xantrex is a registered trademark of Xantrex International. Other trademarks, registered trademarks, and product names are the property of their respective owners and are used herein for identification purposes only.

Notice of Copyright Freedom 458 Auxiliary Switch Port Errata © August 2006 Xantrex International. All rights reserved.

Exclusion for Documentation UNLESS SPECIFICALLY AGREED TO IN WRITING, XANTREX TECHNOLOGY INC. ("XANTREX")

- (A) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION.
- (B) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK; AND
- (C) REMINDS YOU THAT IF THIS MANUAL IS IN ANY LANGUAGE OTHER THAN ENGLISH, ALTHOUGH STEPS HAVE BEEN TAKEN TO MAINTAIN THE ACCURACY OF THE TRANSLATION, THE ACCURACY CANNOT BE GUARANTEED. APPROVED XANTREX CONTENT IS CONTAINED WITH THE ENGLISH LANGUAGE VERSION WHICH IS POSTED AT WWW.XANTREX.COM.

Date and Revision August 2006 Rev A

Part Number 976-0137-01-01

Contact Information

Telephone: 1 800 670 0707 (toll free North America) 1 360 925 5097 (direct)

Fax: 1 800 994 7828 (toll free North America) 1 360 925 5143 (direct)

Email: customerservice@xantrex.com

Web: www.xantrex.com